

**Colors:**  
PMS485 Red  
Black

*Printed front  
and back*

*Printed size:*  
4 1/4 x 22 3/4

*Folded size:*  
4 1/4 x 5 7/8

*Top of English  
text outside  
after folding*

**- IMPORTANT, Read First -**  
**- IMPORTANTE, Lea primero -**  
**- IMPORTANT! - First Determine  
Housing Style Before Servicing**



**Service Instructions:**



1. A style 3 “Core Adapter” is required to service Style A housings. (See illustrations above). To service Style A housings proceed to Step 2. To service Style B housings discard the core adapter and proceed to Step 5.
2. If a style 1 core adapter has been installed, proceed to step 5. If a style 2 adapter has been installed, remove it before continuing to step 3.
3. Align the holes on the top of the core assembly between the wings of the new core adapter. (See Fig. 1)



4. With core adapter in position (See Fig. 2), press core adapter firmly to snap in place. (See Fig. 3)



5. Remove the old O-ring, lubricate new O-ring with clean oil and install on cap.
6. Install filter element and threaded cap.
7. Tighten cap to 18.5 ft-lbs.

**Need Help?**  
See [www.coreadapter.com](http://www.coreadapter.com)  
for more details and installation video.

**- IMPORTANTE, Lea primero -**  
**- IMPORTANT, Read First -**  
**- IMPORTANTE - Determine  
primero el tipo de carcasa antes  
de proceder con el servicio de  
mantenimiento**




**Instrucciones de servicio:**



1. Se requiere de un “Adaptador Principal” estilo 3 para dar servicio a cubiertas Estilo A. (Ver ilustraciones arriba). Para dar servicio a las carcasas tipo A, proceda a realizar el paso 2. Para dar servicio a las carcasas tipo B, deseche el adaptador central y proceda a realizar el paso 5.
2. Si se ha instalado un adaptador principal estilo 1, proceda al paso 5. Si se ha instalado un adaptador estilo 2, remuévalo antes de continuar al paso 3.
3. Alinee los orificios de la parte superior del conjunto principal entre las alas del nuevo adaptador principal. (ver figura 1)



4. Con el adaptador central en posición (ver figura 2), presione firmemente el adaptador central para que encaje en su lugar (ver figura 3).

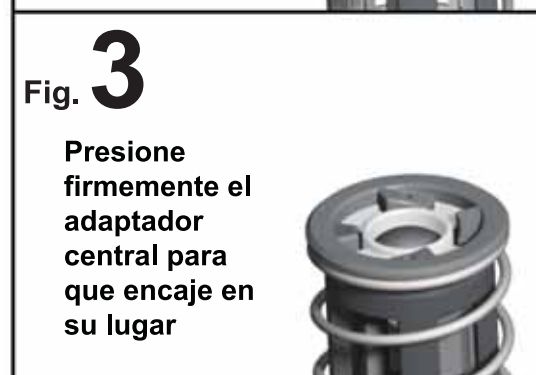

5. Retire la junta tórica vieja (O-ring), lubrique la junta tórica nueva (O-ring) con aceite limpio e instálela en la tapa.
6. Instale el elemento de filtro y la tapa roscada.
7. Ajuste la tapa a 18.5 pies/libras.

**¿Necesita ayuda?**  
Visite [www.coreadapter.com](http://www.coreadapter.com) para mayor  
detalle y video de instalación.